


How to use Benz IR code reader to program keys



- 1) Read the data out from the lock head of Benz vehicles. And calculate ready the keys you want to write





- 2) Use benz BIN format tool to transfer the calculated keys, then save the file

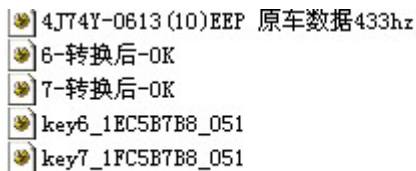


- 3) Open this software and setup the USB connection port,

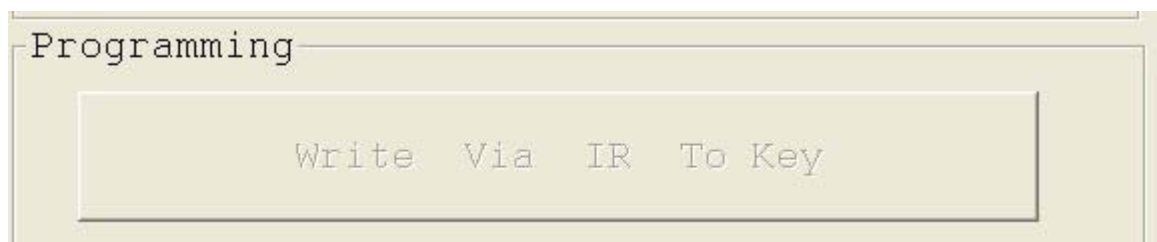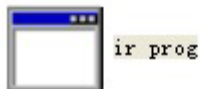

After you setup ready, this color will changed to black, then click program

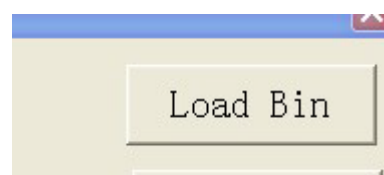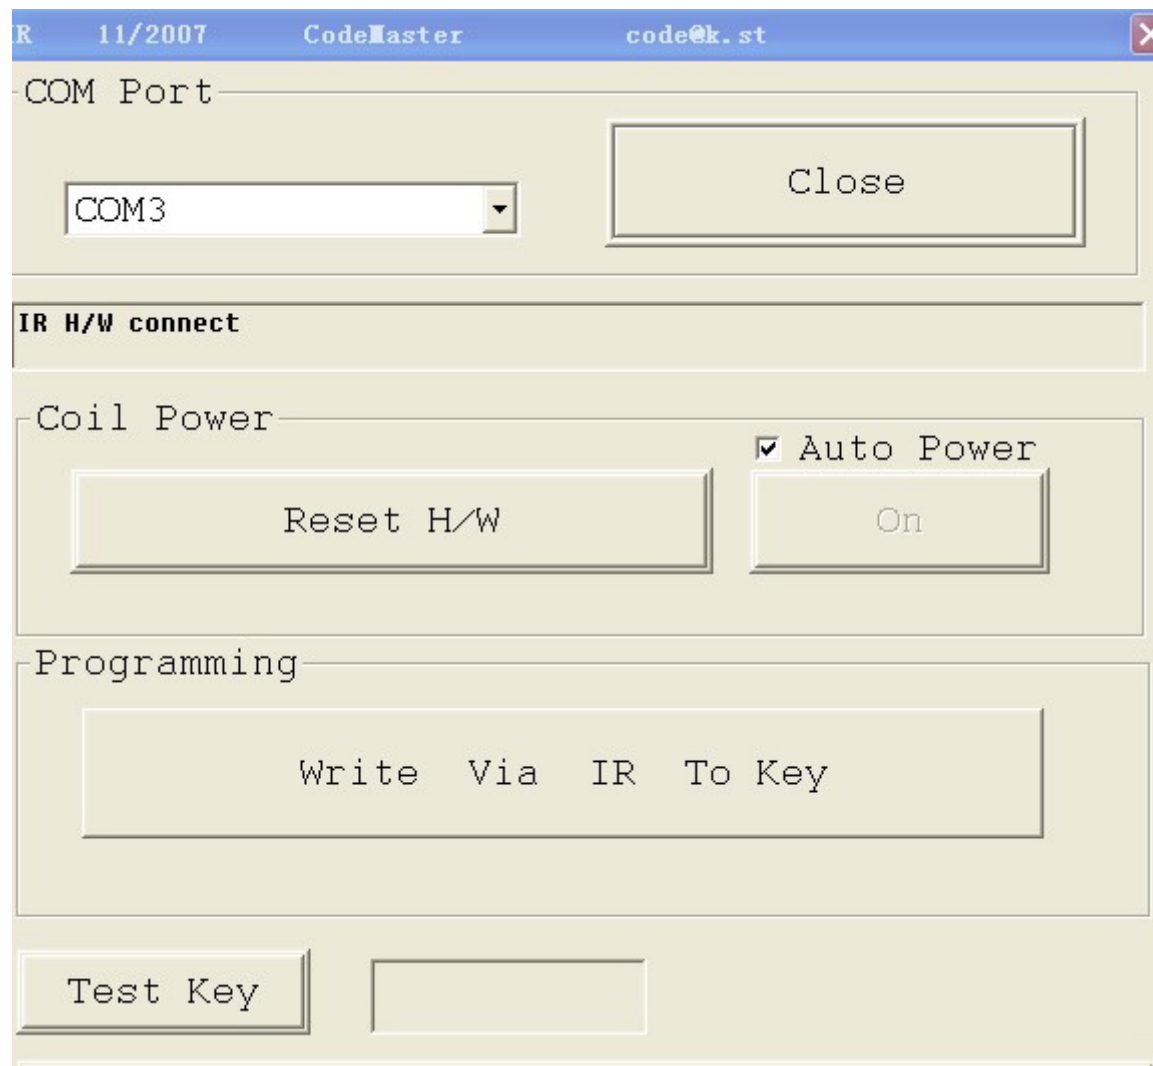

Then choose the file and open it

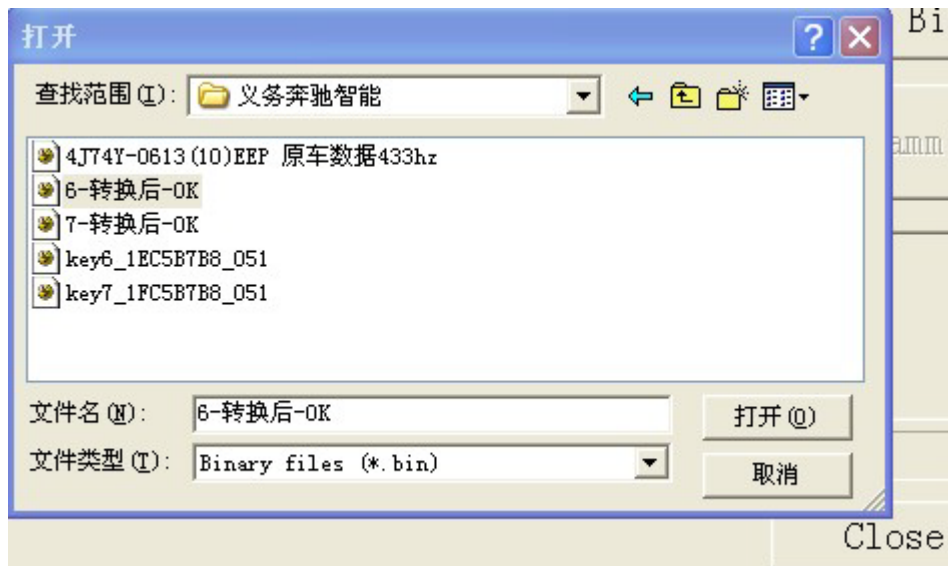

Open the transferred data that you want to write

Activate Key Test

Tick and test the keys

Programming

Last byte set to limiter value (11h)


If blue bar reach the end, then it means the key is new and never been used

Activate Key Test
 Activate Key Confirm:

Tick this two and start programming officially

Programming

Last byte set to limiter value (11h)



**If blue bar reach the end, it will prompt you the key is programmed completely.
And go to your car, Turn the ignition will be ok**